



## **Chefmaster Warming Lamp Instruction Manual**

### **Model**

HED492 – Warming Lamp Single

HED493 – Warming Lamp Double

HED494 – Warming Lamp Double with Marble Base

**Thank you for purchasing your Chefmaster Warming Lamp. To make full use of the product please read this manual carefully before using the product and keep it safe for future reference.**

### **Safety Tips**

- If you find any damage when the product is unpacked, contact your Chefmaster supplier within 24 hours of receipt of goods
- Always position on a flat stable surface
- Repairs should always be carried out by a qualified technician
- Never touch the lamp shade when the product is on or recently after use.
- Do not fit or remove bulb when the unit is on
- Do not use this product outside
- Do not carry when the lamp is hot
- Always switch off and unplug the unit before cleaning
- If the power cord becomes damaged it must be replaced by a qualified technician
- This product is not designed to be used by persons with reduced physical or mental capabilities, lack of experience or knowledge, unless they are given suitable supervision, this includes children.

### **Pack Contents**

- 1 x Chefmaster Warming Lamp
- HED492: Bulb X 1
- HED493 / HED494: Bulb X 2

### **Assembly Instructions**

- Remove all packaging including all protective plastic from your Chefmaster Warming Lamp
- Position the base on a flat surface
- Plug your Chefmaster Warming Lamp into the mains
- The Warming Lamp will now be ready to turn on

### **Operation**

- Place food into a heat proof tray, a stainless steel or ceramic GN pan
- Plug the Warming Lamp into the mains and switch on
- The bulbs will now be on and heating up

## **Cleaning & Maintenance**

- Before cleaning, disconnect the warming lamp from the electricity supply.
- Use a soft damp cloth to clean the frame of the Warming Lamp. Only clean the lamp shade when it has cooled down.
- DO NOT submerge the Warming Lamp in water or use water sprays to clean it
- Always clean your Chefmaster Warming Lamp daily

## **Troubleshooting**

<b>Fault</b>	<b>Possible Cause</b>	<b>Solution</b>
The unit is switched on, the bulb is not heating	The unit is not plugged in The plug or lead are damaged The fuse has blown The bulb is not inserted properly The bulb has failed	Check the unit is plugged in and switched on Contact your Chefmaster distributor Replace the fuse Remove bulb and re-insert  Replace the bulb

## **Transportation and Storage**

Please handle your Warming Lamp with care to prevent any damage to the unit and internal parts. The Warming Lamp should be stored somewhere which is ventilation and non-corrosive gas.

Do not store any flammable objects near the equipment.

## **Technical Information**

### **HED492**

Voltage ~230v 50/60Hz

Power 250 watt

Weight 4.8kg

Dimensions 290 x 250 x 700mm

**HED493**

Voltage ~230v 50/60Hz

Power 2 x 250 watt

Weight 6.9kg

Dimensions 380 x 250 x 700mm

**HED494**

Voltage ~230v 50/60Hz

Power 2 x 250 watt

Weight 6.9kg

Dimensions 400 x 270 x 700mm

- Chefmaster Warming Lamp is supplied with a 3 pin plug and lead with a 13 amp fuse
- Appliance must be earthed
- If in doubt contact a qualified electrician or your Chefmaster distributor

**Disposal**

Under WEEE regulations this product must not be disposed of as household waste. To prevent damage to the environment and humans this product must be disposed of in an approved and environmentally friendly recycling process. For more information on how to dispose of this correctly please contact your Chefmaster distributor or local authority responsible for waste disposal.

**Compliance**

All Chefmaster parts and products have undergone a stringent testing process to ensure that they comply with all European standards and specifications. All Chefmaster products carry the CE approval symbol.