

ECOBOILER COUNTERTOP WATER BOILERS/TAP



ECOBOILER T5 1000660	ECOBOILER T10 1000661	ECOBOILER T20 1000662	ECOBOILER T30 1000663	DIMENSIONS
<ul style="list-style-type: none"> • 5, 10, 20 or 30 litre options • Easy to descale • Removeable drip tray 		<ul style="list-style-type: none"> • Made from 95% recyclable materials • Energy-efficient with precise temperature 		

SEE TABLE FOR
PRODUCT DIMENSIONS

BOILERS

NAME ORDER CODE	POWER @ 230V	IMMEDIATE DRAW OFF	L/HR	CUPS (180ml)/HR	DIMENSIONS (D x W x H mm)	TAP TO COUNTER (T mm)	PLUMBING REQS
Ecoboiler T5 1000660	2.8kW	5L	28L	156	515 x 210 x 465	185	3/4" BSP
Ecoboiler T10 1000661		10L			463 x 210 x 590		
Ecoboiler T20 1000662		20L			570 x 240 x 690		
Ecoboiler T30 1000663	5.6kW	30L	56L	311	570 x 300 x 690		

PACKAGING

NAME ORDER CODE	PACKED WEIGHT	PACKAGING DIMENSIONS (L x W x H mm)	QTY / PALLET
Ecoboiler T5 1000660	10kg	550 x 560 x 290	18
Ecoboiler T10 1000661	12.5kg	290 x 690 x 560	
Ecoboiler T20 1000662	19kg	600 x 350 x 840	10
Ecoboiler T30 1000663	22kg	600 x 380 x 840	

OPTIONAL

HANDS-FREE URN TAP ADAPTER
2100500




ASSOCIATED PRODUCT (SOLD SEPARATELY)

TAP BOILERS IN A RANGE OF VOLUMES FOR CATERING LOCATIONS SUCH AS CAFÉS, HOTELS, RESTAURANTS AND CANTEENS.




ECOBOILER T5, T10, T20, T30


ECOBOILER T5
1000660

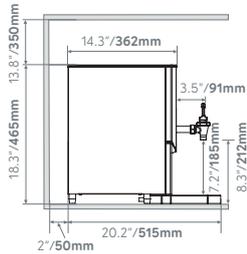


ECOBOILER T10
1000661

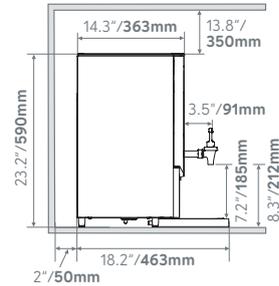

ECOBOILER T20
1000662

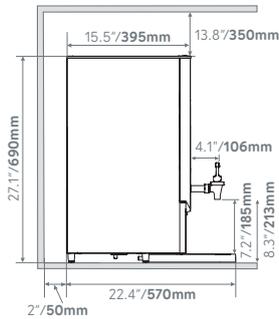

ECOBOILER T30
1000663

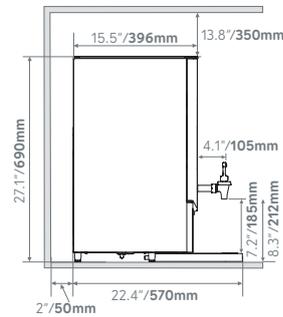

VENTILATION REQUIREMENTS

50mm/1.9" clearance required at each side and back of machine if installed in an enclosed cabinet.

ELECTRICAL INSTALLATION PROCEDURE

When installing the machine, always observe the local regulations and standards. The standard machine is supplied with a UK 3-pin plug. For EU models a 2-pin CEE-7 plug will be supplied. US models will be supplied with the suitable plug. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 14.5 - 145psi (100 - 1000kPa, 0.1 - 1MPa).
- Requires inline water filter within your water specifications.
- The machine is supplied with a 3/4" BSP connection.
- Connect straight tailpiece of the hose to the stop valve fitting. Make sure that the pre-attached sealing washer is fitted.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through, especially for new installations.

- Connect the hose to the inlet valve of the boiler. Make sure a sealing washer is fitted.
- Turn on water and check for leaks.

OPERATING BOILER FOR THE FIRST TIME

- Check that all installation procedures have been carried out.
- Ensure water valve is on.
- Plug boiler into a suitable socket and press power button on the front of the machine marked 'Power'.
- **NOTE:** On the T5 the 'Power' button light also acts as the "Ready/Status" indicator.
- The "power on" light will glow green and the machine will fill to a safe level, above the elements, before heating.
- The "Ready/Status" light will cycle two red flashes while the machine is filling to the safe level.
- Whilst the machine is above the safe level and filling, the "Ready/Status" light will glow orange.
- The "Ready/Status" light will glow green when the machine is both full and up to normal operating temperature, allow approx 15 minutes.
- The boiler is now ready for use.

NOTE: Because the boiler is electronically controlled no priming is necessary. The element cannot switch on until a safe level of water is reached.