




Connecta HEA128/HEA129 2 & 3 Tier Service Trolleys Assembly Instructions

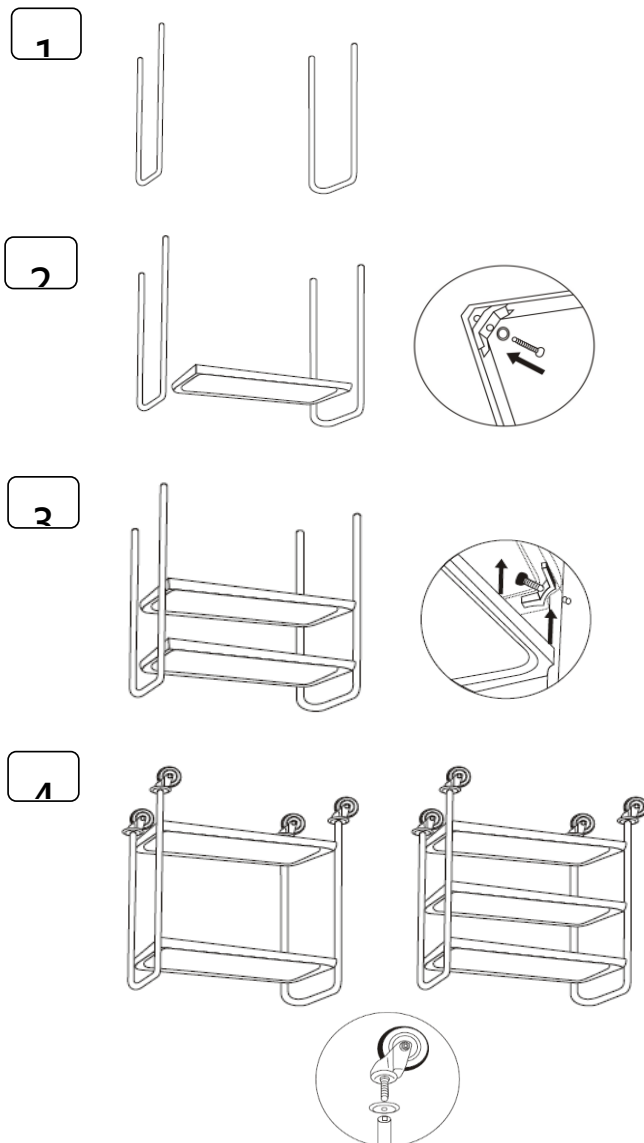

Assembly

1. Turn the shelves & tubular handles upside down to start assembly. The shelf with "Prepara" logo to be assembled first.
2. Assemble the corner fittings, washers and gently tighten screws.
3. Repeat step "2" for middle shelf (3-tier) and lower shelf.
4. Tighten all screws firmly.
5. Fit the Castor protectors.
6. Screw on the castors.
7. Remove the protective coating from the shelves.

Safety Tips

- o DO NOT stand or climb on the trolley.
- o DO NOT drop heavy items on the trolley.
- o DO NOT place heavier items on the top of the trolley than on the bottom.

Cleaning

- o Clean the trolley using warm soapy water.
- o Dry thoroughly after cleaning

Parts (check before assembly)

ITEM	QUANTITY (2 Tier / 3 Tier)
Castors, Castor Protectors	4 pieces each / 4 pieces each
Castor corner fittings, Screws, Washers	8 pieces each / 12 pieces each
Shelves	2 pieces / 3 pieces
Tubular Handles	2 pieces / 2 pieces
Hex Key, Spanner	1 piece each / 1 piece each

Max. load: 50 kg per shelf, 130 kg overall